




SINGLE ACTING FRONT END CYLINDER WITH SINGLE EYE

MF_ANT 191.5.5801 RP-D1460

(Rev 01.2021) - Subject to change without notice

MOUNTING DIMENSIONS

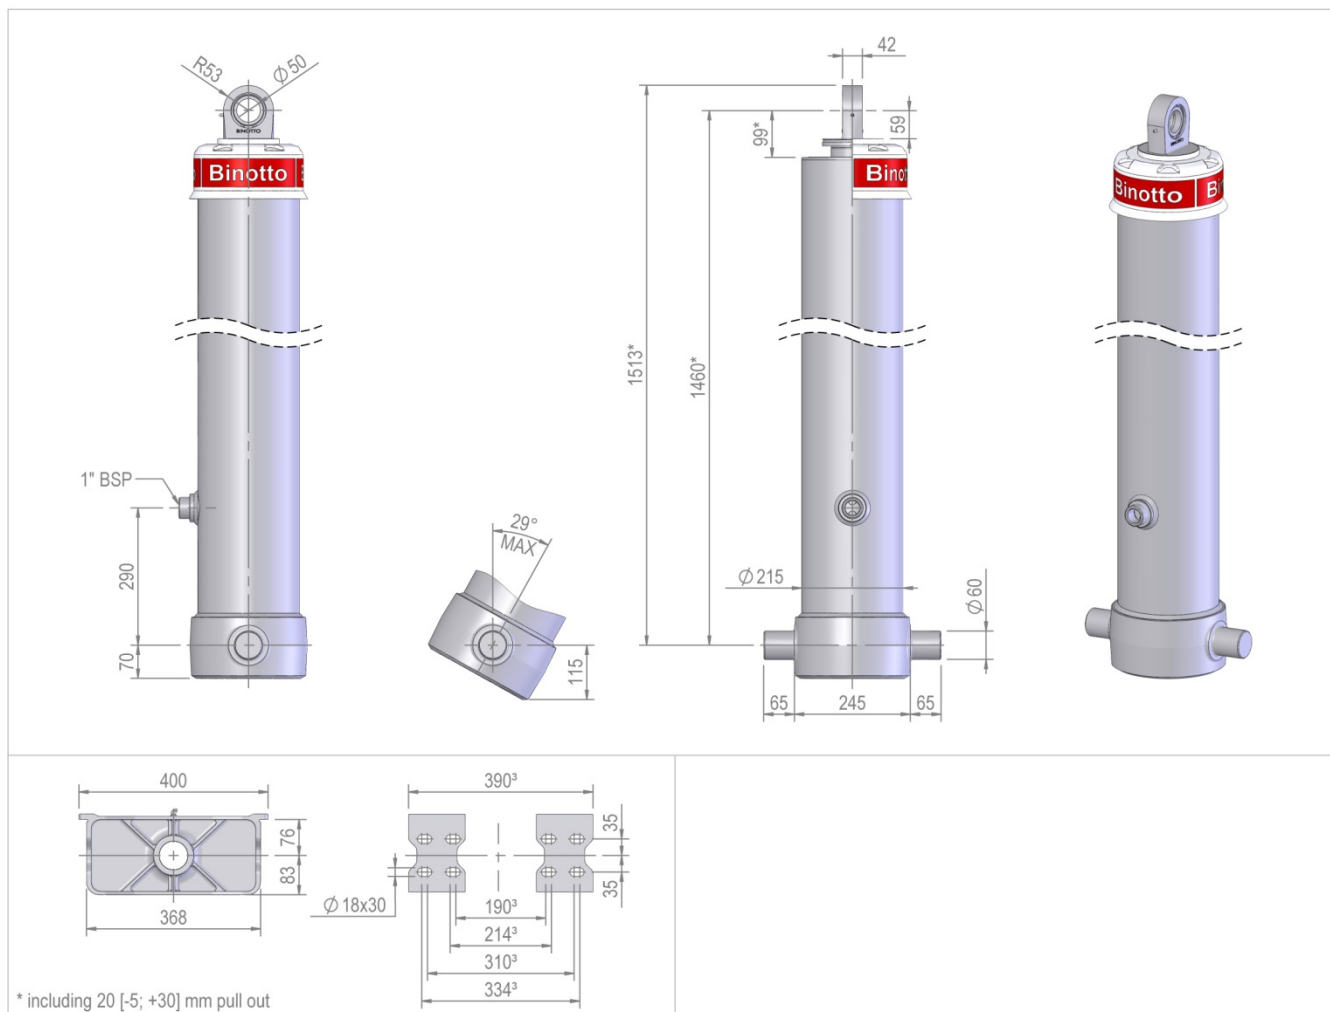

* including 20 [-5; +30] mm pull out

TECHNICAL SPECIFICATIONS

Working volume [L]	106
Max. working pressure [bar]	250
Weight (only cylinder) [kg]	267

LOAD SPECIFICATIONS

Max. cyl. load (start tipping) [kN]	345
-------------------------------------	-----

MAX. PUMP FLOW

With ESV ¹ [L/min]	190
Without ESV ¹ [L/min]	170
With ESV ¹ below -20°C [L/min]	133
Without ESV ¹ below -20°C [L/min]	119

Stage n°	1	2	3	4	5					Total Stroke
Ø Stage [mm]	Ø191	Ø169	Ø149	Ø129	Ø110					
Stroke [mm]	1158	1152	1159	1163	1169					5801

The application of a telescopic cylinder is to lift up tipping bodies, loaded with different materials, in order to discharge this material during its extension. • This cylinder is designed as a lifting device only for loads along the longitudinal axis. • It must not be used as a structural member or be subject to side load. • Hydraulic oil temperature allowable range between -40°C and +80°C. • Chromed thickness: minimum 20 µm • For standard version, max. duration of extension is 2 hrs. • Cylinder is painted gray (RAL 7021) with a thickness conforming to the 480 hours neutral salt spray test as per ISO 9227 (ISO 10289, rating 9). • The max tipping weight that can be raised by the cylinder is the body weight plus the max payload. This value, calculated at the max pressure, is a rough indication of the tipping power of the cylinder and must be used as a first criteria for the selection of the cylinder. • The real tipping mass can only be calculated by the design engineer of the dump truck, and must take into account the geometry of the dump body and operating conditions. • Never exceed maximum cylinder load. • Never exceed maximum pressure. • For Pump flow selection, contact the Binotto Technical Department.

¹ End of Stroke Valve. ³ Including recommended clearance of 1 mm each side between brackets and cylinder.

REMARKS

REVISIONS

The cylinder must always be sold together with Quick Instructions (QI) and User Manual (MU). Make sure they are included and check them carefully before installation, usage, service or repair.